


BTT SKR V1.4 PIN

WWW.BIGTREE-TECH.COM

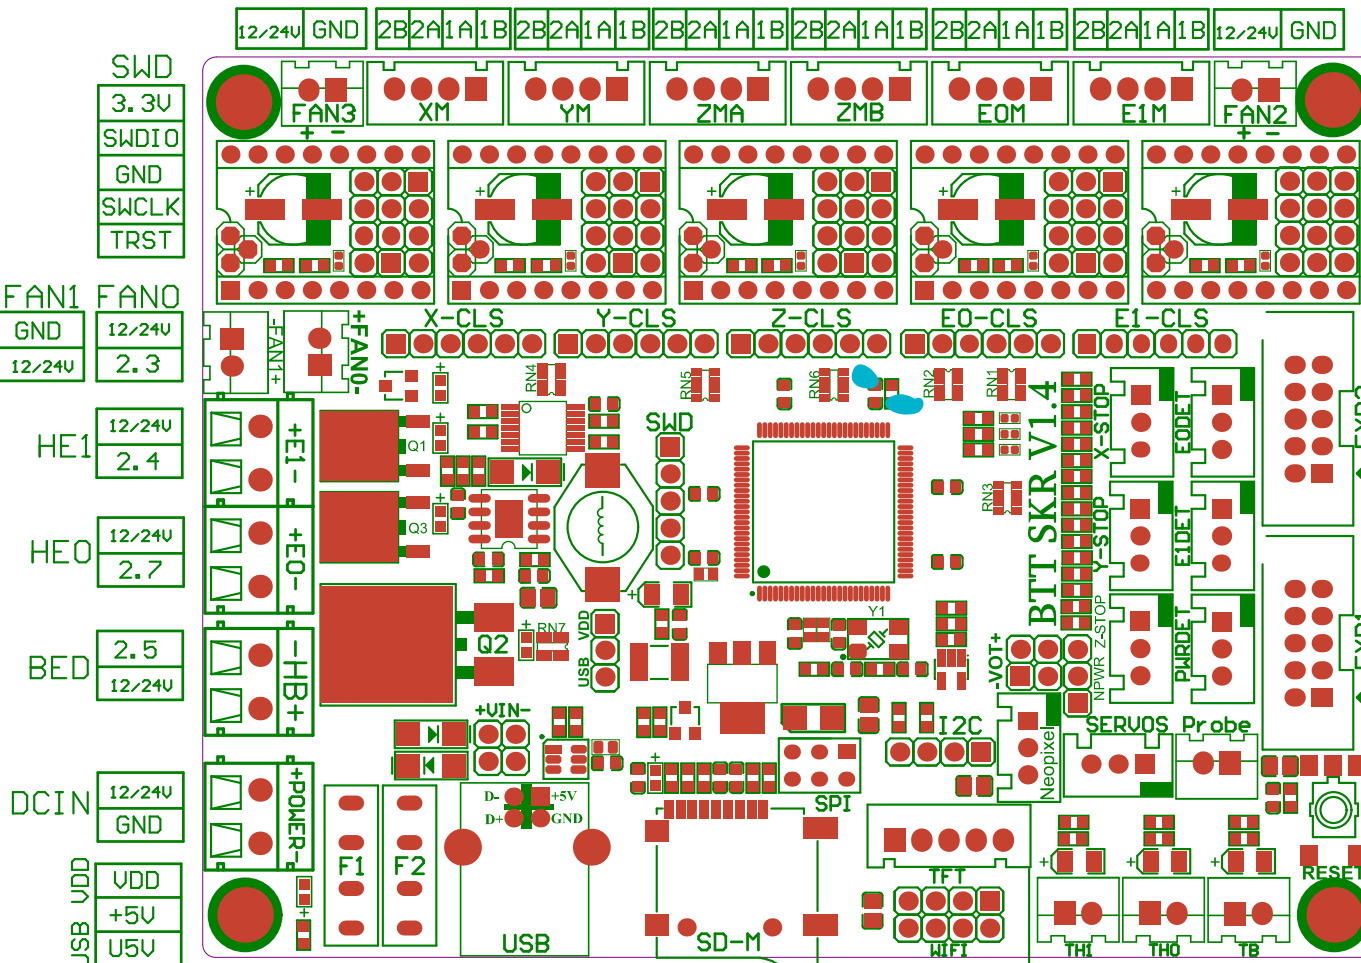

EN	STEP	DIR
2.1	2.2	2.6
2.8	0.19	0.20
0.21	0.22	2.11
2.12	2.13	0.11
1.16	1.15	1.14

XCS	YCS	ZCS	E0CS	E1CS
1.10	1.9	1.8	1.4	1.1
0.5	MISO			
1.17	MOSI			
0.4	SCK			

X-STOP	Y-STOP	Z-STOP
+5V	+5V	+5V
GND	GND	GND
1.29	1.26	1.25
1.28	1.25	1.0
1.27	GND	GND

EXP2	
NC	GND
RESET	1.31
0.18	3.25
0.16	3.26
0.15	0.17

EXP1	
+5V	GND
1.23	1.22
1.21	1.20
1.19	1.18
0.28	1.30

Neopixel	
-VOT+	+5V
GND	5VOT
GND	NPWR
GND	+5V

SERVOs	Probe
NPWR	GND
1.24	NPWR
GND	2.0
GND	GND
GND	0.10

+VIN-	USB	SPI
12/24V	D-	0.26
GND	U5V	0.7
12/24V	D+	0.8
GND	GND	0.9
GND	+5V	+5V

I2C	TFT	TH1	TH0	TB
0.1	RST	0.23	0.24	0.25
0.0	RX0	AGND	AGND	AGND
GND	TX0			
+5V	GND			
	NPWR			

MONI-SD
0.27
0.8
0.7
0.9
0.6
DATA2
MISO
SCK
MOSI
SSEL

WIFI
3.3V
NC
NC
4.29
4.28
NC
NC
GND