9			Profile Editor		×
Profile				1	^
Name: Test	:	Auto Co	onnect) }	· · · · · · · · · · · · · · · · · · ·
Mode: 💿	Local O Remote Host:	ocalhost		*	Gemini Telescope HitecAstro
Cuiding: Internal Host: localhost				•	IML
INDI Web Manager INDI Hub Q Scan					Lacerta Optics LakesideAstro
Select Devic	es) 	Lunatico Mallincam
Mount:	Telescope Simulator 🔹	Filter:		ALD/ 1 *	Meade MoonLite
Camera 1:	CCD Simulator 👻	AO:	*	Aux 2	Moravian Instruments
Camera 2:		Dome:	- *	The second s	Nn OGMAVision
Focuser:	- *	Weather:		•	Omegon Optec
Remote:	driver@host:port,driver@host	2	(Optique Unterlinden Orion
			0%) Sequence		RBFocus Rainbow Astro Raspberry Pl Rigel Systems Robert Brown Robofocus SVBONY
		56	lect devic) } }	Terrans PowerBoxPr Toupcam USB_Focus Unihedron Wanderer Astro Web Cameras XAGYL



<u></u>		INDI Control Panel	_ 🗆 X
CCD S <u>i</u> mulator <u>T</u> elesco	pe Simulator Terrans <u>P</u> ov	werBoxPro V2	
Main Control Connec			
Driver Info	Name	TerransPowerBoxProV2	
	Exec	indi_terrans_powerboxpro_v2	
	Version	1.0	
		32896	
Connection Mode	<u>S</u> erial		
System Ports	1a86_Single_Serial_578D	1043127	
Ports	Port	Serial_578D043127-If00 Set	
Baud Rate	9600 🔻		
Auto Search	Enabled Disabled		
Refresh	S <u>c</u> an Ports		
Select the r	ecognized CH3	43 serial port device	
			<u>c</u> lass
		Clear	Clos <u>e</u>
		INDI Control Panel	_ 🗆 X
	Tarras Day		
		werBoxPro V2	
Main Control Co <u>n</u> nec	tion <u>O</u> ptions		
Connection	Connect Disconnect		
After selecti	ng the corres	ponding serial device, click Cor	nect.
	•		
		Clear	Close

CD S <u>i</u> mulator <u>T</u> elesco	ope Simulator Terrans <u>P</u> owe	erBoxPro V2				
Main Control Conne	ction Options Environme	ent <u>A</u> dditional Settin	igs			
Connection	<u>Connect</u> <u>Disconnect</u>	12.01	-			
InputVotage	InputVotage (V)	12.01				
InputCurrent	InputCurrent (V)	0.11	Here you can view			
Power	Total Power (W)	1.30	information and in temperature of the			
	12V Power (W)	1.20		400100		
	19V Power (W)	0.24				
•	USB Power (W)	0.00				
MCU	MCU Temperature (C)	33.91				
O DC ASI533	ON OFF		n control the switches			
OC Heater	ON OFF		er supply port.The red			
OC Focuser	ON OFF	status light indicates that the power is off, while the green status light				
DC Flat Cover	ON OFF	indicates th	nat the power is on.			
DC Rotator	ON OFF					
	ON OFF					
USB HEO5PRO	ON OFF	1				
024-07-05T02:29:26: [IN	NFO] Loading device configura NEO] Terrans RowerBoxPro V2 NFO] Handshake successfully!	is online. Indicate:	s a successful device	ear Clos		
024-07-05T02:29:26: [IN 024-07-05T02:29:26: [IN 024-07-05T02:29:26: [IN	VEO Terrans PowerBoxPro V2	INDI Control Panel		ear Clos		
024-07-05T02:29:26: [IN 024-07-05T02:29:26: [IN 024-07-05T02:29:26: [IN 024-07-05T02:29:26: [IN	NFO] Terrans RowerBoxPro V2 NFO] Handshake successfully! ope Simulator Terrans <u>P</u> owe	INDI Control Panel	Cļe	ear Clos		
24-07-05T02:29:26: [IN 24-07-05T02:29:26: [IN 24-07-05:20:20:20:20:20:20:20:20:20:20:20:20:20:	NFO] Terrans PowerBoxPro V2 NFO] Handshake successfully! ope Simulator Terrans <u>P</u> owe ection <u>O</u> ptions En <u>v</u> ironme	INDI Control Panel	<u>Cl</u> e	ear Clos		
024-07-05T02:29:26: [IN 024-07-05T02:29:26: [IN 024-07-05T02:29:26: [IN 024-07-05T02:29:26: [IN 024-07-05T02:29:26: [IN 024-07-05T02:29:26: [IN 0200	NEO] Terrans PowerBoxPro V2 NFO] Handshake successfully! ope Simulator Terrans Powe ection Options Environme Period (s)	INDI Control Panel PROXPRO V2	Cļe	ear Clos		
024-07-05T02:29:26: [IN 024-07-05T02:29:26: [IN 024-07-05T02:29:26: [IN 024-07-05T02:29:26: [IN 0	NFO] Terrans PowerBoxPro V2 NFO] Handshake successfully! ope Simulator Terrans Power ection Options Environme Period (s) Refresh	INDI Control Panel PROXPRO V2	<u>Cl</u> e	ear Clos		
024-07-05T02:29:26: [IN 024-07-05T02:29:26: [IN 024-07-05T02:29:26: [IN 024-07-05T02:29:26: [IN 024-07-05T02:29:26: [IN 0 Update 0 Weather 0 Safety	NFO] Terrans PowerBoxPro V2 NFO] Handshake successfully! ope Simulator Terrans Power ection Options Environme Period (s) Refresh Override Status	INDI Control Panel PROXPRO V2 ent Additional Setting 60	gs 60.000 ‡ <u>S</u> et	ear Clos		
024-07-05T02:29:26: [IN 024-07-05T02:29:26: [IN 024-07-05T02:29:26: [IN 024-07-05T02:29:26: [IN 0	NEO] Terranc PowerBoxPro V2 NFO] Handshake successfully! ope Simulator Terrans Power ection Options Environme Period (s)	INDI Control Panel PROXPRO V2	gs 60.000 ‡ <u>S</u> et In the environme you can view the	ear Clos		
224-07-05T02:29:26: [IN 124-07-05T02:29:26: [IN	NFO] Terrans PowerBoxPro V2 NFO] Handshake successfully! ope Simulator Terrans Power ection Options Environme Period (s) Refresh Override Status	INDI Control Panel INDI Control	gs 60.000 ‡ <u>S</u> et	ear Clos		
224-07-05T02:29:26: [IN 124-07-05T02:29:26: [IN	NEO] Terranc PowerBoxPro V2 NFO] Handshake successfully! ope Simulator Terrans Power ection Options Environme Period (s) Period (s) Refresh Override Status Temperature (C) Humidity %	INDI Control Panel INDI Control Panel INDI Control Panel INDI Additional Setting 60 -50.00 1.00	gs 60.000 ‡ <u>S</u> et In the environme you can view the the temperature	ear Clos		
24-07-05T02:29:26: [IN 24-07-05T02:29:26: [IN 24-07-05:20:20:20:20:20:20:20:20:20:20:20:20:20:	NFO] Terrans PowerBoxPro V2 NFO] Handshake successfully! ope Simulator Terrans Power ection Options Environme Period (s) Refresh Override Status Temperature (C) Humidity % Dew Point (C)	INDI Control Panel INDI Control	gs 60.000 ‡ Set In the environme you can view the the temperature sensors	ear Clos		
24-07-05T02:29:26: [IN 24-07-05T02:29:26: [IN 24-07-05:20:20:20:20:20:20:20:20:20:20:20:20:20:	NEO] Terranc PowerBoxPro V2 NFO] Handshake successfully! ope Simulator Terrans Power ection Options Environme Period (s) Period (s) Refresh Override Status Temperature (C) Humidity % Dew Point (C) OK range mm	INDI Control Panel INDI Control	gs 60.000 ‡ Set In the environme you can view the the temperature sensors	ear Clos		
24-07-05T02:29:26: [IN 24-07-05T02:29:26: [IN 24-07-05:20:20:20:20:20:20:20:20:20:20:20:20:20:	NFO] Terranc PowerBoxPro V2 NFO] Handshake successfully! ope Simulator Terrans Power ection Options Environme Period (s) Refresh Override Status Override Status Temperature (C) Humidity % Ok range min OK range max % for Warning	INDI Control Panel INDI Control Panel INDI Control Panel INDI Control Panel Control Pa	gs In the environme you can view the the temperature sensors -15.00 35.00 Set	ear Clos		
124-07-05T02:29:26: [IN	NFO] Terranc PowerBoxPro V2 NFO] Handshake successfully! ection Options Environme Period (s) Refresh Override Status Temperature (C) Humidity % Dew Point (C) OK range max % for Warning OK range min	INDI Control Panel INDI C	gs 60.000 ‡ <u>S</u> et 10 the environme you can view the the temperature sensors 15.00 ‡ 0.00 ↓	ear Clos		
124-07-05T02:29:26: [IN	NEO] Terranc PowerBoxPro V2 NFO] Handshake successfully! ope Simulator Terrans Power ection Options Environme Period (s) Period (s) Refresh Override Status Override Status Temperature (C) Humidity % OK range max ØK range max M for Warning OK range min OK range max	INDI Control Panel INDI Control Panel INDI Control Panel INDI Additional Setting 60 -50.00 1.00 0.00 -15.00 15 0.00	gs 60.000 ‡ Set In the environme you can view the the temperature sensors set 15.00 set 0.00 set 100.00 set	ear Clos		
 D24-07-05T02:29:26: [IN D24-07-05T02:29:26: [IN D24-07-05T02:29:26: [IN D24-07-05T02:29:26: [IN D24-07-05T02:29:26: [IN D24-07-05T02:29:26: [IN D4-07-05T02:29:26: [IN D5-05T02:29:26: [IN D4-07-05T02:29:26: [IN D4-07-05T02:29:26: [IN D4-07-05T02:29:26: [IN D4-07-05T02:29:26: [IN D4-07-05T02:29:26: [IN D5-05T02:29:26: [IN D4-07-05T02:29:26: [IN D4-07-05T02:29:26: [IN D4-07-05T02:29:26: [IN D5-05T02:29:26: [IN D5-05T02:29:26: [IN D5-05T02:29:26: [IN D4-07-05T02:29:26: [IN <!--</td--><td>NEO] Terranc PowerBoxPro V2 NFO] Handshake successfully! ope Simulator Terrans Power ection Options Environme Period (s) Period (s) Refresh Override Status Override Status Temperature (C) Humidity % OK range max ØK range max % for Warning ØK range max % for Warning ØK range max % for Warning</td><td>INDI Control Panel INDI Control</td><td>gs 60.000 ‡ Set In the environme you can view the the temperature sensors Set -15.00 Set 0.00 \$Set 0.00 Set</td><td>ear Clos</td>	NEO] Terranc PowerBoxPro V2 NFO] Handshake successfully! ope Simulator Terrans Power ection Options Environme Period (s) Period (s) Refresh Override Status Override Status Temperature (C) Humidity % OK range max ØK range max % for Warning ØK range max % for Warning ØK range max % for Warning	INDI Control Panel INDI Control	gs 60.000 ‡ Set In the environme you can view the the temperature sensors Set -15.00 Set 0.00 \$Set 0.00 Set	ear Clos		
024-07-05T02:29:26: [IN Main Control Conne 0 Update 0 Weather 0 Safety • Parameters	NEO] Terranc PowerBoxPro V2 NFO] Handshake successfully! ection Options Environme Period (s) Refresh Override Status Temperature (C) Humidity % Dew Point (C) OK range max % for Warning OK range min OK range min	Is online. Indicates INDI Control Panel erBoxPro V2 ent Additional Setting 60 -50.00 1.00 0.00 15 0.00 15 0.00 15 0.00	gs In the environme you can view the the temperature sensors 	ear Clos		
CD S <u>i</u> mulator <u>T</u> elesco <u>M</u> ain Control <u>Conne</u> <u>Update</u> <u>Update</u> <u>Update</u> <u>Veather</u> <u>Safety</u> <u>Parameters</u> <u>Humidity %</u>	NEO] Terranc PowerBoxPro V2 NFO] Handshake successfully! ope Simulator Terrans Power ection Options Environme Period (s) Period (s) Refresh Override Status Override Status Temperature (C) Humidity % OK range max ØK range max % for Warning ØK range max % for Warning ØK range max % for Warning	INDI Control Panel INDI C	gs 60.000 ‡ Set 1n the environme you can view the the temperature sensors -15.00 35.00 5et 0.00 15.000 ‡ Set 0.00 5et	ear Clos		

12V Auto5V Auto				DCD DCE	DC <u>F</u> contro	the channel t es automatic I here	
State me	mory	ON OFF	S	et power-off	switch status m	emory	
• кепатте		DC A NAME		DC REQ3PRO			
		DC B NAME		DC ASI533	DC ASI533		
Renaming each port, click on Set, reconne the device take		DC CNAME		DC Heater	DC Heater		
		DC D NAME		DC Focuser	DC Focuser		
				DC Flat Cover	DC Flat Cover		
effect.		DC F NAME		DC Rotator	DC Rotator		
		DC 19V NAME USB A NAME USB B NAME USB C NAME		DC NUC	DC NUC		
				USB HEQ5PRO	USB HEQ5PRO	<u>S</u> et	
				USB ASI533	USB ASI533		
				USB Focuser	USB Focuser		
		USB D NAME		USB Flat Cover	USB Flat Cover		
		USB E NAME		USB Filter	USB Filter		
		USB F NAME		USB Rotator	USB Rotator		
024-07-05T02: 024-07-05T02:	29:26: [INF 29:26: [INF	O] Device configuratio O] Loading device cor O] Terrans PowerBoxi O] Handshake success	ifiguratio Pro V2 is	on			